

SYRILUS®

Új plazmapisztoly sorozat
nagyfrekvenciás gyújtással


EASYFIT kábel

LTE-120H

LTE-120M

LTE-150H

LTE-150M

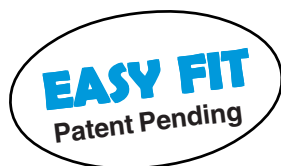


● **Jobb teljesítmény**


● **Tisztább vágás**

● **Gyorsabb munka**


LTE-Torches

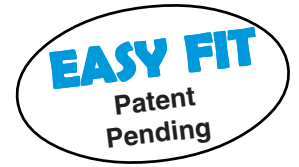


LTE-120H

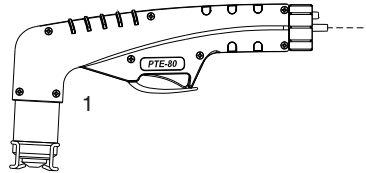



LTE-120M

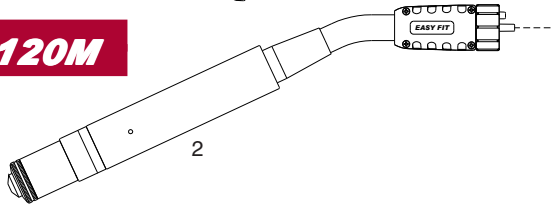

LTE-150H

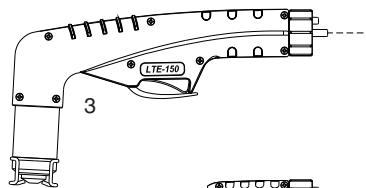

LTE-150M

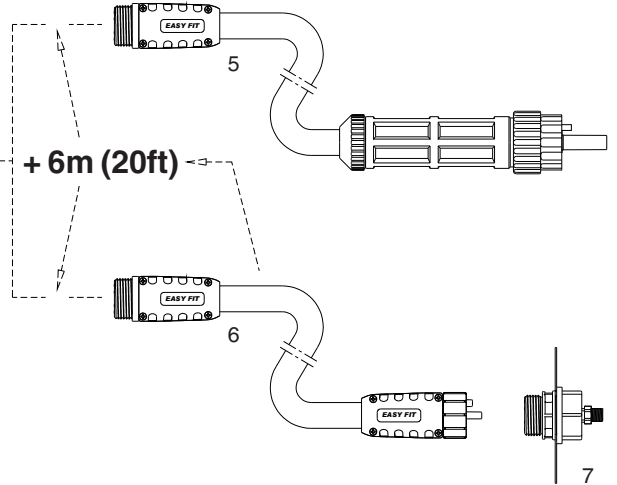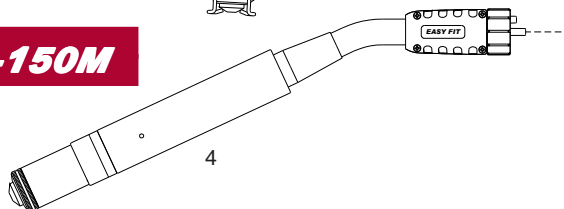

Torch heads & leads

Item#	Description	Code #
1	LTE-120H Hand torch head EASY FIT, w/ handle & parts.	01201E
2	LTE-120M Machine torch head EASY FIT, w/positioning tube & parts	01400E
3	LTE-150H Hand torch head EASY FIT, w/ handle & parts.	02001E
4	LTE-150M Machine torch head EASY FIT, w/positioning tube & parts	04300E
5	Lead Assembly, 6m (20 ft) EASY FIT, Coaxial Cable with Euro Connector	09781FX
6	Extension, 6m (20 ft), complete with EASY FIT, Coaxial Cable	05285FX
7	EASY FIT Central Connection, Machine Side	05265

LTE-120H


LTE-120M

Replacement Parts *LTE-120*

Current : 120Amps
Duty Cycle: 120 Amps - 60%
Gas: Air/N2
Gas Pressure: 70 psi (4.5-5.0 bar)
Gas Flow: 380 scfh (180 lpm)
Post Flow Time: 90 sec. recommended
Pilot : Electrode to Tip
Ignition: HF

EASY FIT
Patent Pending

ÚJ
koaxiális kábel

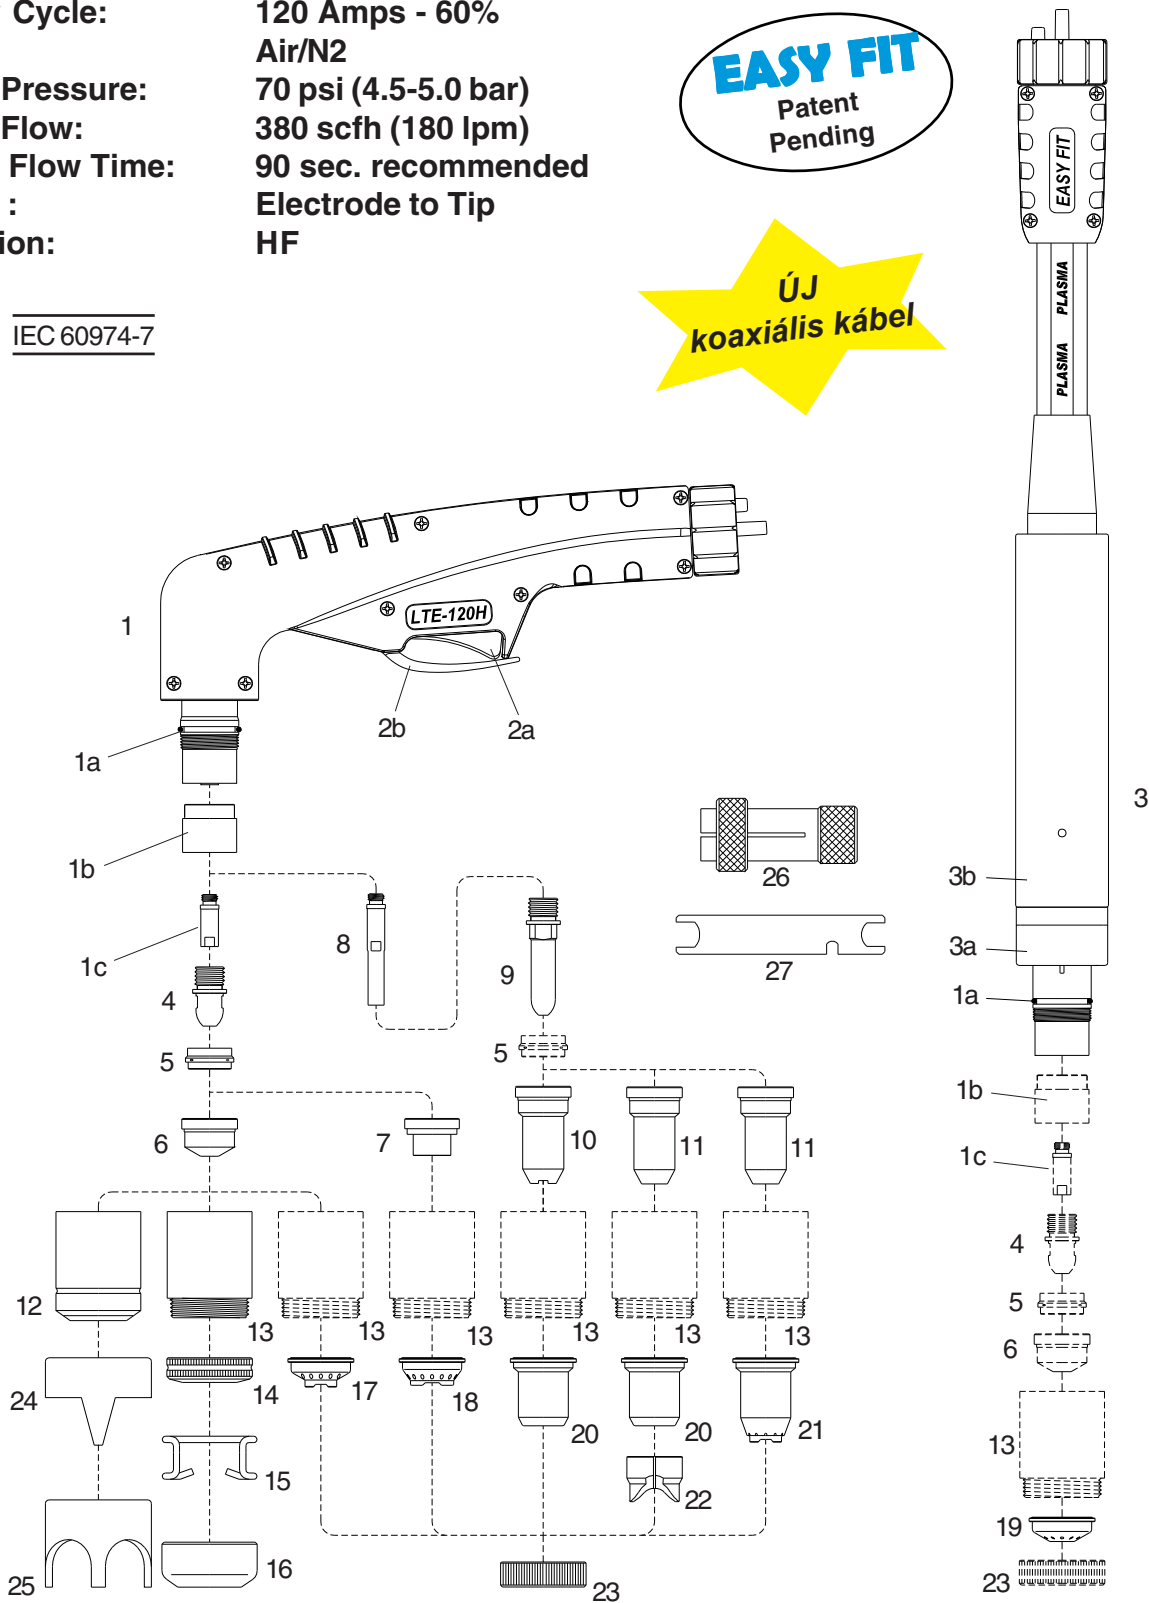

● Standard Layout

Replacement Parts **LTE-120**

Torch parts

Item#	Description	Code#
	H M	
1 ●	LTE-120H Hand torch head EASY FIT , w/ handle & parts.	01201E
1a	O - Ring	02000.60
1b	Front insulator	60085
1c	Diffusor	06004
2a	Switch	07301.20
2b	Safety Tab	09605.42
3 ●	LTE-120M Machine torch head EASY FIT , w/ positioning tube & parts.	01400E
3a	Machine torch head	01400
3b	Positioning Tube	03310
4 ● ●	Electrode	52540
5 ● ●	Swirl ring	60020
6	Tip long life \varnothing 1,10	51140/S
	Tip long life \varnothing 1,35	51141/S
	● ● Tip long life \varnothing 1,60	51142/S
	Gouging tip \varnothing 2,4	51144.24
7	Contact tip \varnothing 1,35	51410
	Contact tip \varnothing 1,6	51411
8	Extended diffusor	06005
9	Extended electrode	52549
10	Extended tip (for contact cutting max. 50A)	51148
11	Extended tip \varnothing 1,35 - 90A - (for 51958 + 51959 or 60380)	51148.13
	Extended tip \varnothing 1,6 - 120A - (for 51958 + 51959 or 60380)	51148.16
12	Nozzle retaining cap	60328
13 ● ●	Contact nozzle retaining cap	60348
	Contact nozzle retaining cap, Max.life	60348/V
14 ●	Spring holder protection nut	51952
15 ●	Spacer spring for code 51952	51911
16	Gouging spacer	51953
17	Spacer for contact cutting, hand (for use with item. 6 only)	51950
18	Spacer for contact cutting, hand (for use with item. 7 only)	51930
19 ●	Shield cup, machine (for use with item. 6 only)	51951
20	Shield cup, hand (max. 50A)	51957
21	Spacer for contact cutting, hand	51958
22	Spacer for extended tips High Amp.	51974
23 ●	Locking nut	51959
24	Double pointed spacer	60370
25	Crown spacer	60371
26	Extractor for swirl ring	60369
27 ● ●	Wrench for electrode	60368

Accessories

	Circle cutting attachment	51851
	Cutting guide	51807

LTE-150H


LTE-150M

Replacement Parts *LTE-150*

Current : 150Amps
Duty Cycle: 150 Amps - 60%
Gas: Air
Gas Pressure: 70 psi (4.5-5.0 bar)
Gas Flow: 470 scfh (220 lpm)
Post Flow Time: 90 sec. recommended
Pilot : Electrode to Tip
Ignition: HF

EASY FIT
Patent Pending

ÚJ
koaxiális kábel

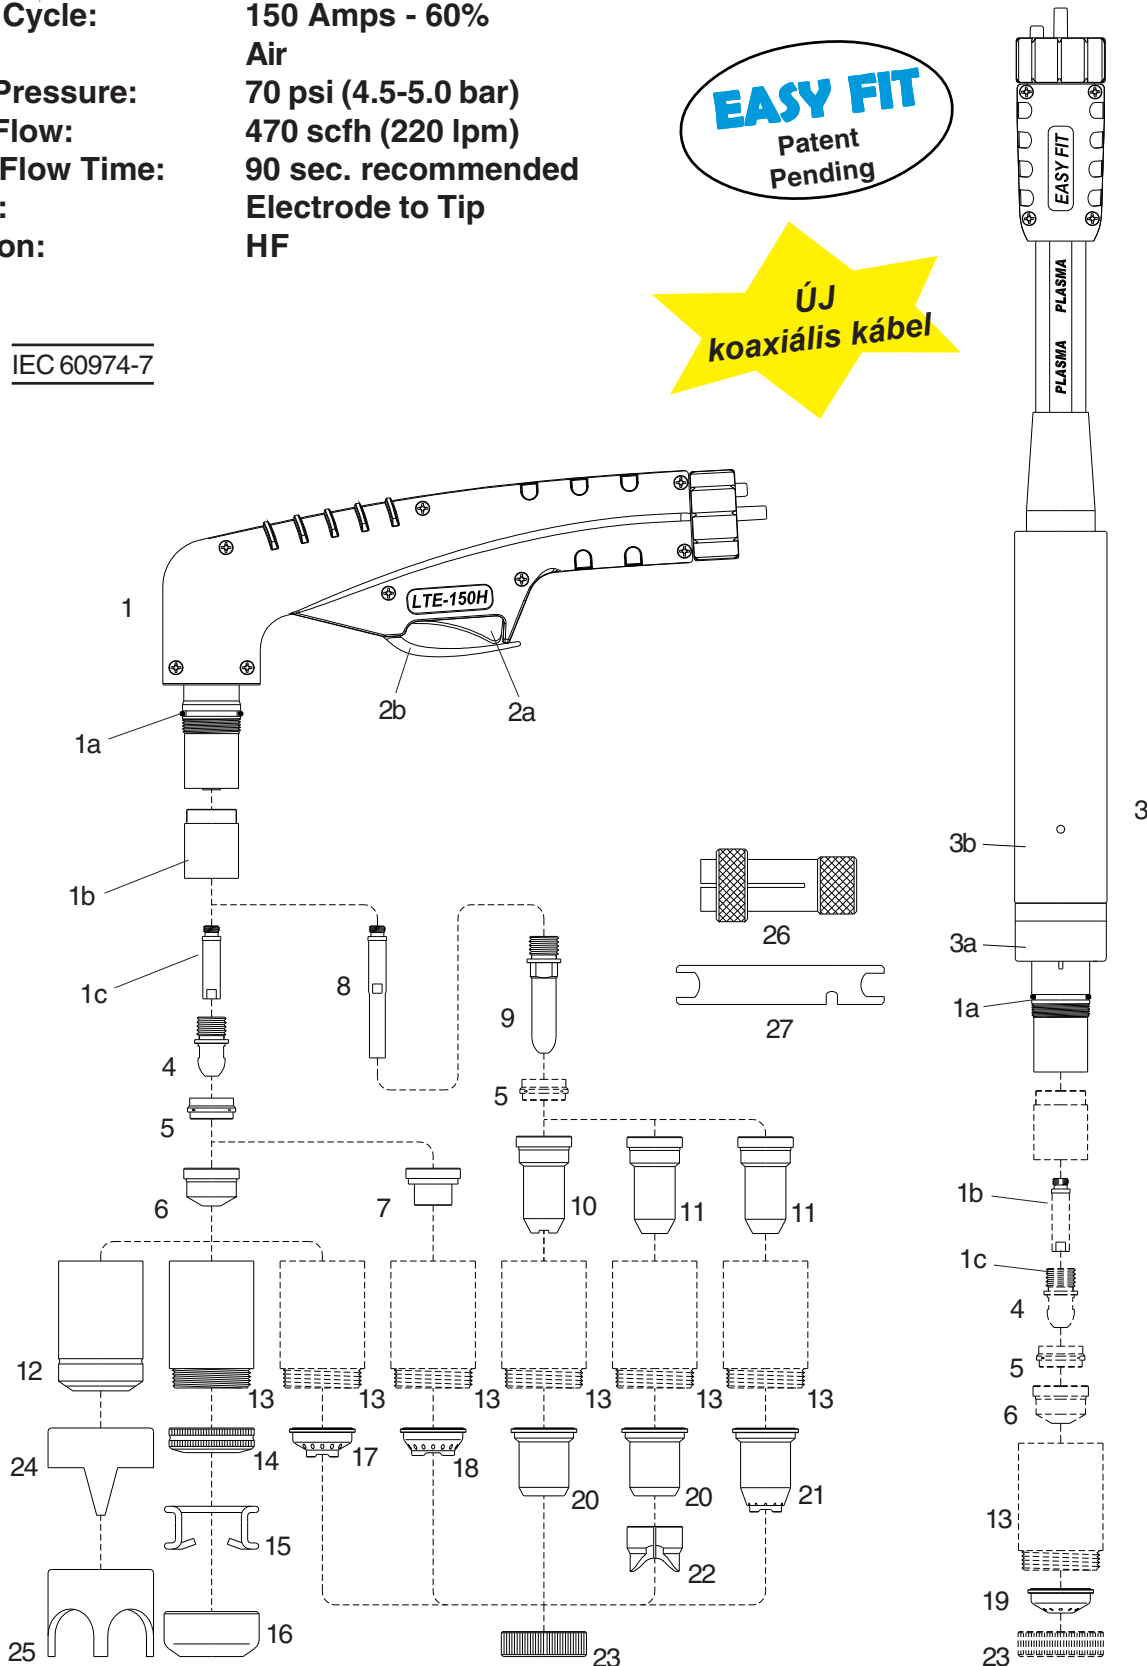

● Standard Layout

Replacement Parts **LTE-150**

Torch parts

Item#	Description	Code#
	H M	
1 ●	LTE-105H Hand torch head EASY FIT , w/ handle & parts.	02001E
1a	O - Ring	02000.60
1b	Front insulator	60080
1c	Diffusor	05004
2a	Switch	07301.20
2b	Safety Tab	09605.42
3 ●	LTE-150M Machine torch head EASY FIT , w/ positioning tube & parts.	04300E
3a	Machine torch head	04300
3b	Positioning Tube	03310
4 ● ●	Electrode	52540
5 ● ●	Swirl ring	60020
6	Tip long life ø 1,10	51140/S
	Tip long life ø 1,35	51141/S
	Tip long life ø 1,60	51142/S
● ●	Tip long life ø 1,80	51143/S
	Gouging tip ø 3.0	51144
7	Contact tip ø 1,35	51410
	Contact tip ø 1,6	51411
	Contact tip ø 1,8	51412
8	Extended diffusor	05005
9	Extended electrode	52549
10	Extended tip (for contact cutting max. 50A)	51148
11	Extended tip ø 1,35 - 90A - (for 51958 + 51959 or 60380)	51148.13
	Extended tip ø 1,6 - 120A - (for 51958 + 51959 or 60380)	51148.16
	Extended tip ø 1,8 - 150A - (for 51958 + 51959 or 60380)	51148.18
12	Nozzle retaining cap	60330
13 ● ●	Contact nozzle retaining cap	60350
	Contact nozzle retaining cap, Max.life	60350/V
14 ●	Spring holder protection nut	51952
15 ●	Spacer spring for code 51952	51911
16	Gouging spacer	51953
17	Spacer for contact cutting, hand (for use with item. 6 only)	51950
18	Spacer for contact cutting, hand (for use with item. 7 only)	51930
19 ●	Shield cup, machine (for use with item. 6 only)	51951
20	Shield cup, hand (max. 50A)	51957
21	Spacer for contact cutting, hand	51958
22	Spacer for extended tips High Amp.	51974
23 ●	Locking nut	51959
24	Double pointed spacer	60370
25	Crown spacer	60371
26	Extractor for swirl ring	60369
27 ● ●	Wrench for electrode	60368

Accessories

	Circle cutting attachment	51851
	Cutting guide	51807